


## TO OPERATE YOUR SIGNALLING STATION

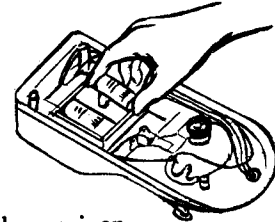

- 1). Remove the base and put two U11 battery in each receiver, making certain that the battery makes proper contact at each end.
- 2). Plug the wire into the connections at each side of the light; press the stud on top of the connection to open the hole for the wires.
- 3). To replace bulb, first remove the red cover then screw in a new torch bulb, If the bulb does not light first make sure it is screwed right in.
- 4). The tone of the buzzer can be altered by adjusting the screw under the buzzer. If the buzzer does not function adjust the screw until the required sound is obtained.

MADE IN HONG KONG

MORSE CODE			
A	.-	N	--
B	---	O	---
C	---	P	---
D	---	Q	---
E	.	R	---
F	---	S	---
G	---	T	-
H	---	U	---
I	..	V	---
J	---	W	---
K	---	X	---
L	---	Y	---
M	--	Z	---
1	----	2	----
3	----	4	----
5	----	6	----
7	----	8	----
9	----	0	----
.	----	.	----
?	----	?	----