Code #CPO-4
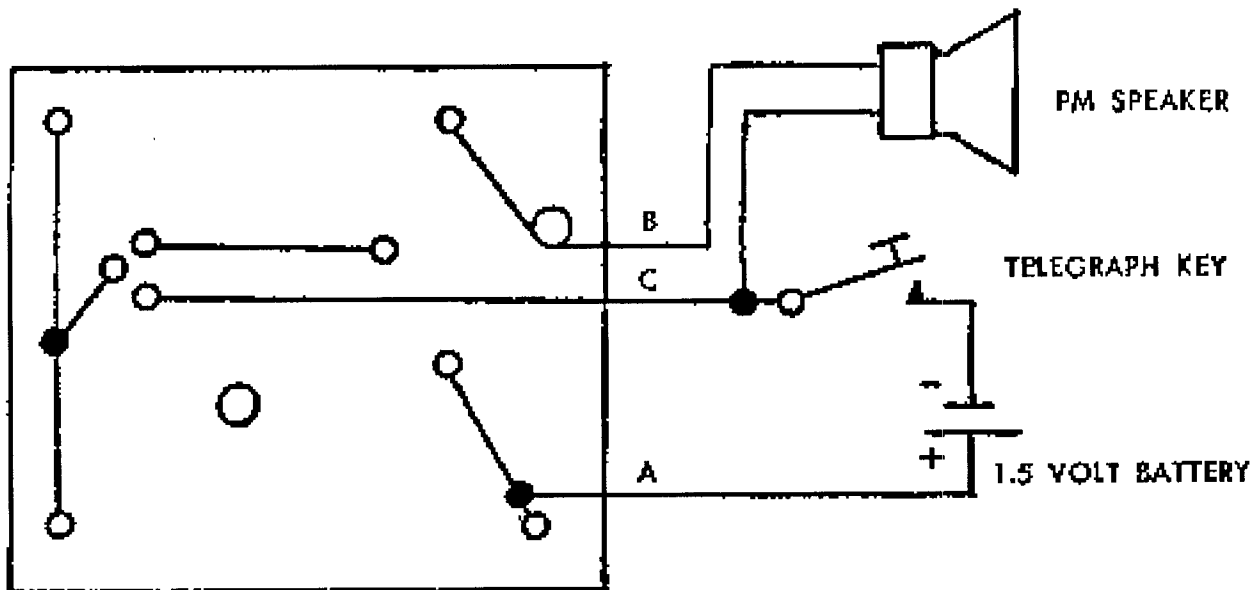
DESCRIPTION: This solid state module is an efficient code practice oscillator, ideal for learning Morse Code.

REQUIRED ACCESSORIES: A telegraph key, a 1½ volt battery, and any PM speaker.

ASSEMBLY INSTRUCTIONS:
1. Place module with wire leads facing up (refer to schematic below).
2. Connect module lead A to battery positive.
3. Connect module lead B to either speaker terminal.
4. Connect module lead C to other speaker terminal and also to one telegraph key terminal.
5. Connect other telegraph key terminal to battery negative.

SCHEMATIC: CPO-4 Module, wire leads facing up.

PM SPEAKER

TELEGRAPH KEY

1.5 VOLT BATTERY

International Morse Code

A	• —	H	• • • •	O	— — —	V	• • • —
B	— • • •	I	• •	P	• — — •	W	• — —
C	— • — •	J	• — — —	Q	— — • —	X	— • • —
D	— • •	K	— • —	R	• — •	Y	— • — —
E	•	L	• — • •	S	• • •	Z	— — • •
F	• • — •	M	— —	T	—		
G	— — •	N	— •	U	• • —		